
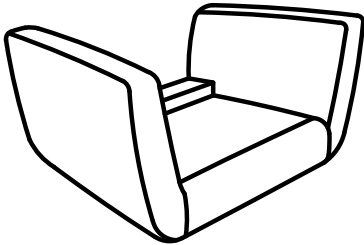
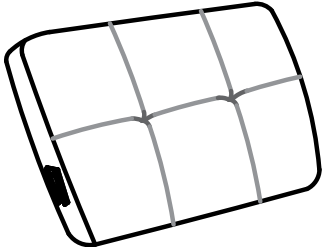
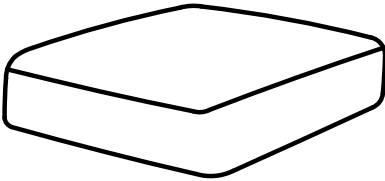
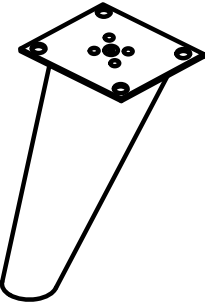
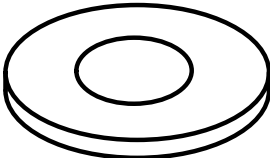
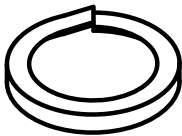
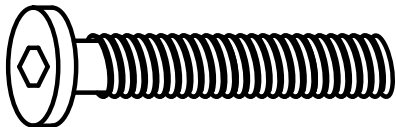


Note: Do not use power tools for assembly. Power tools increase the risk of over-tightening which leads to splitting or cracking the wood.


Component List


No	Drawing	Qty	Description
A		1	SEAT
B		1	BACK REST
C		1	SEAT CUSHION
D		4	WOODEN LEG (70*180H)
E		16	FLAT WASHER (1/4"*16*1.5MM)
F		16	SPRING WASHER (1/4")
G		16	BOLT (1/4"*25MM)
H		1	ALLEN KEY (M4*50*100MM)

Step #1

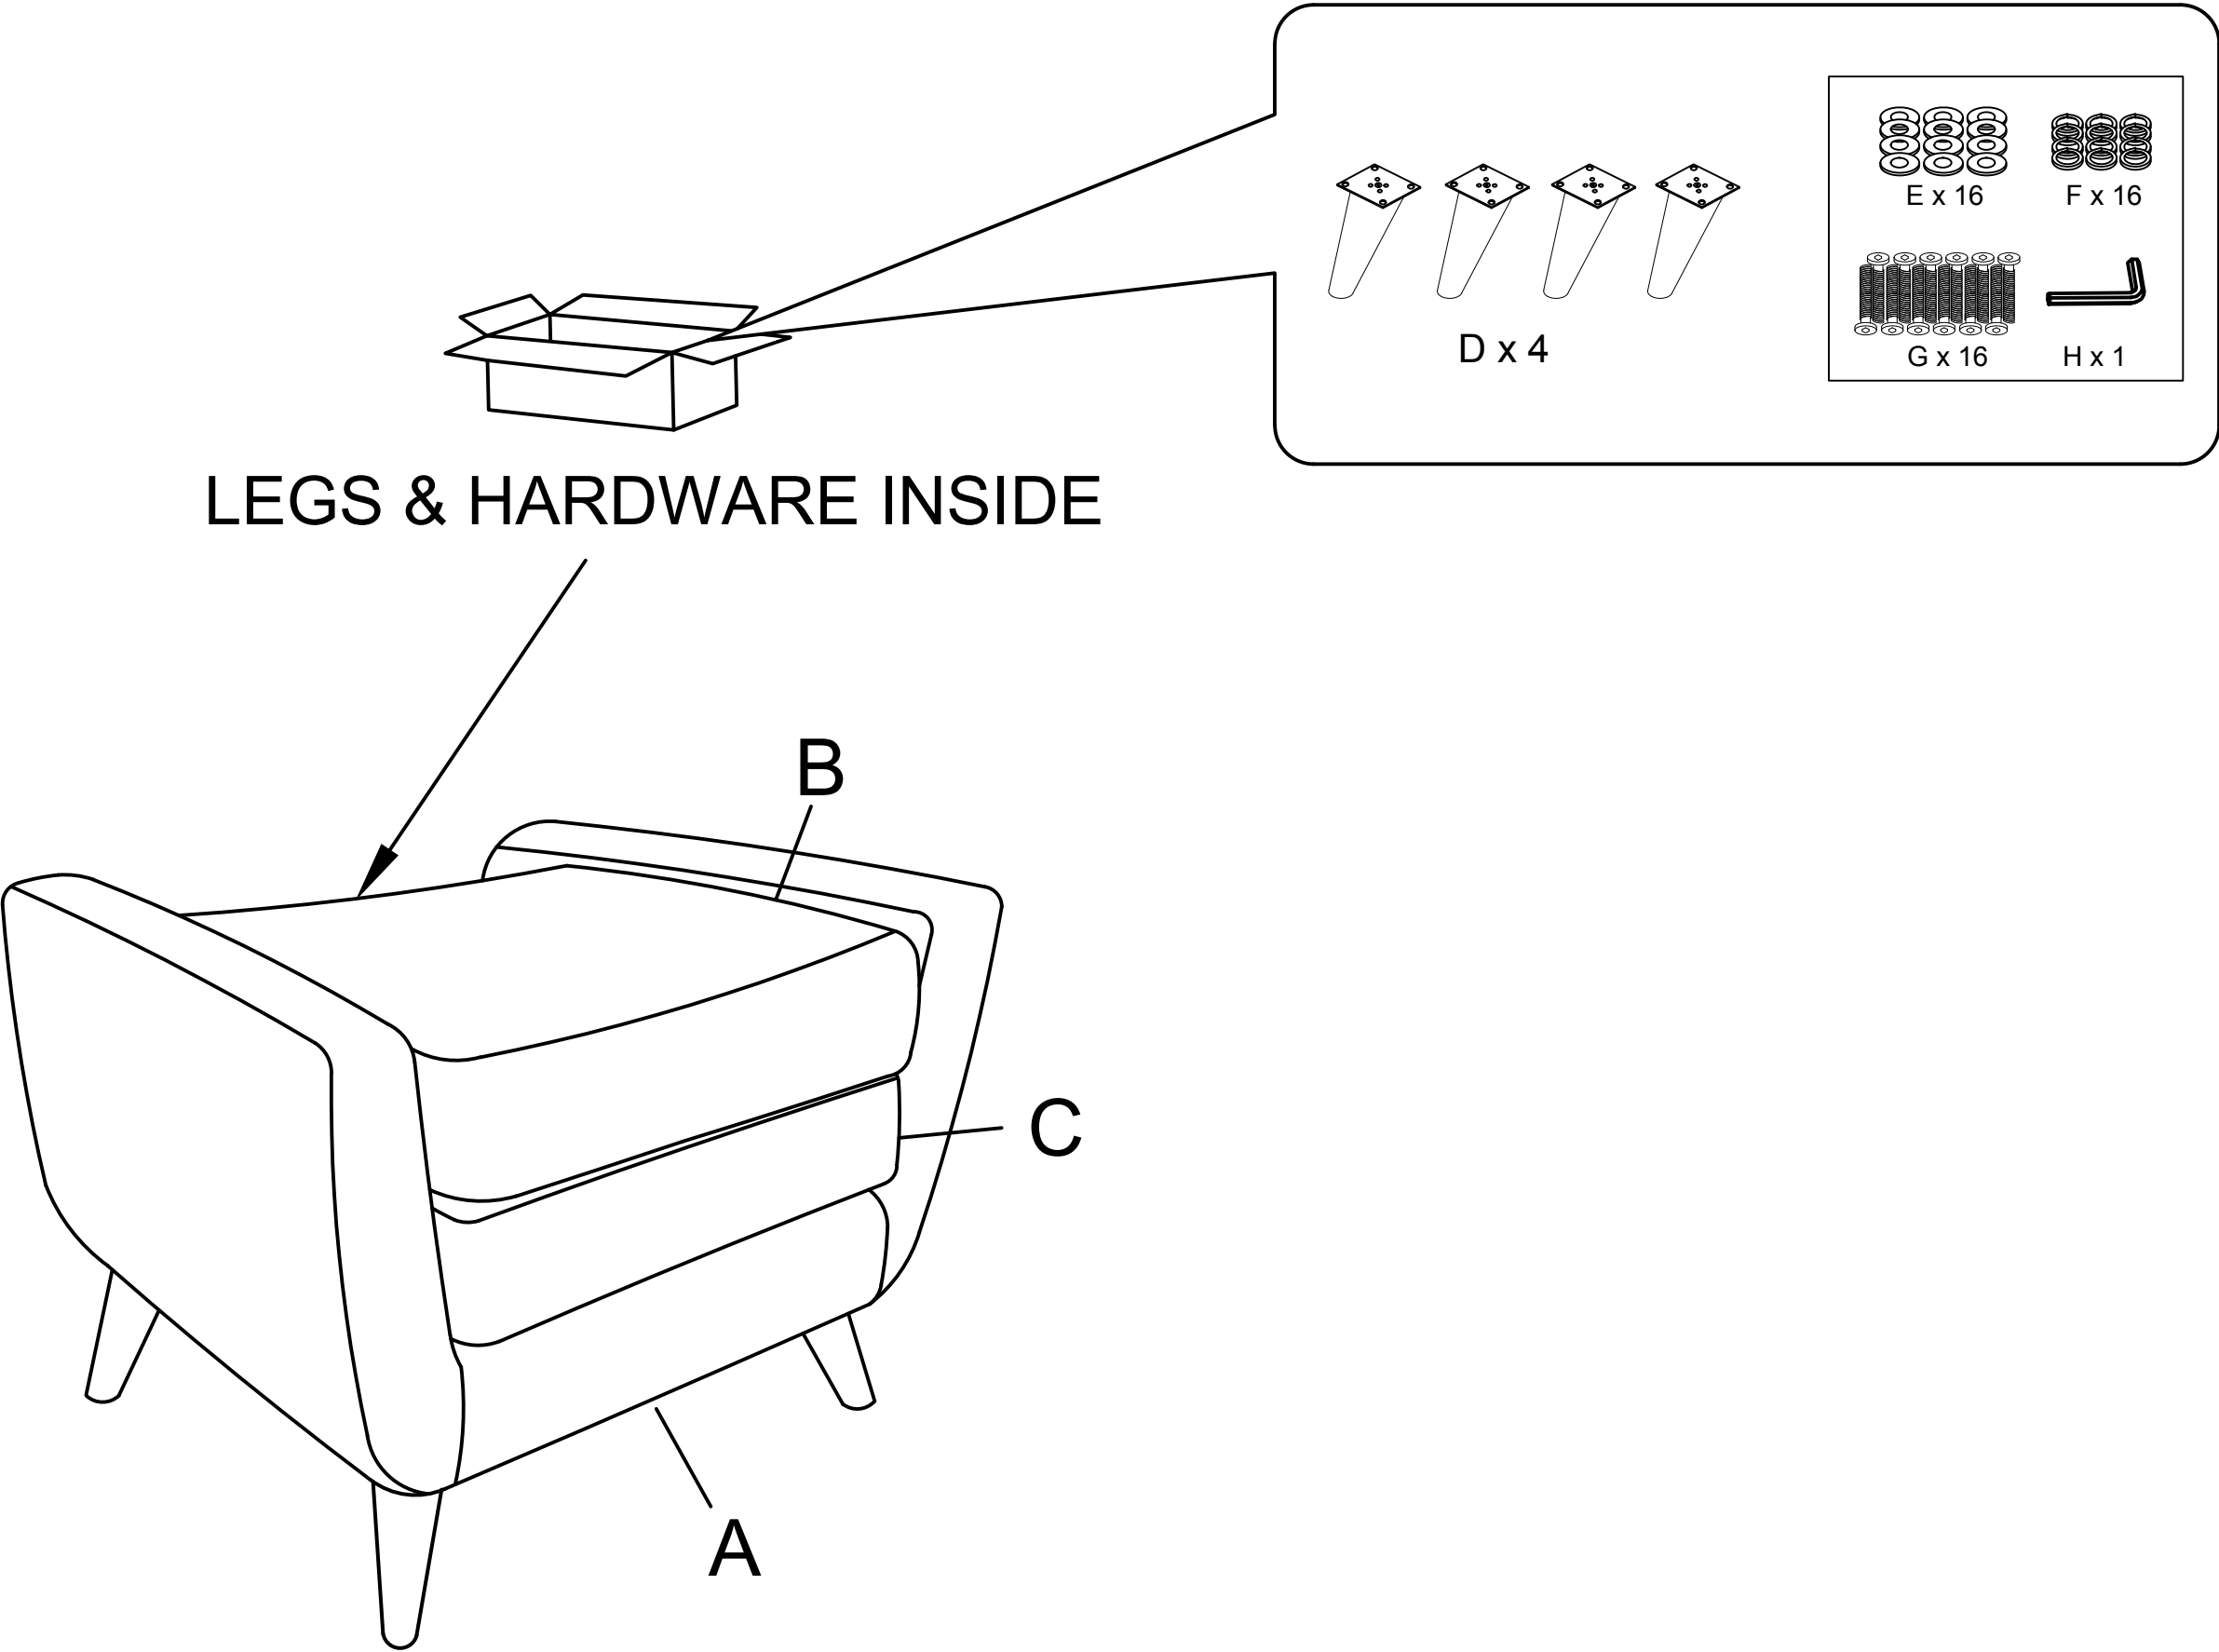

Step #2

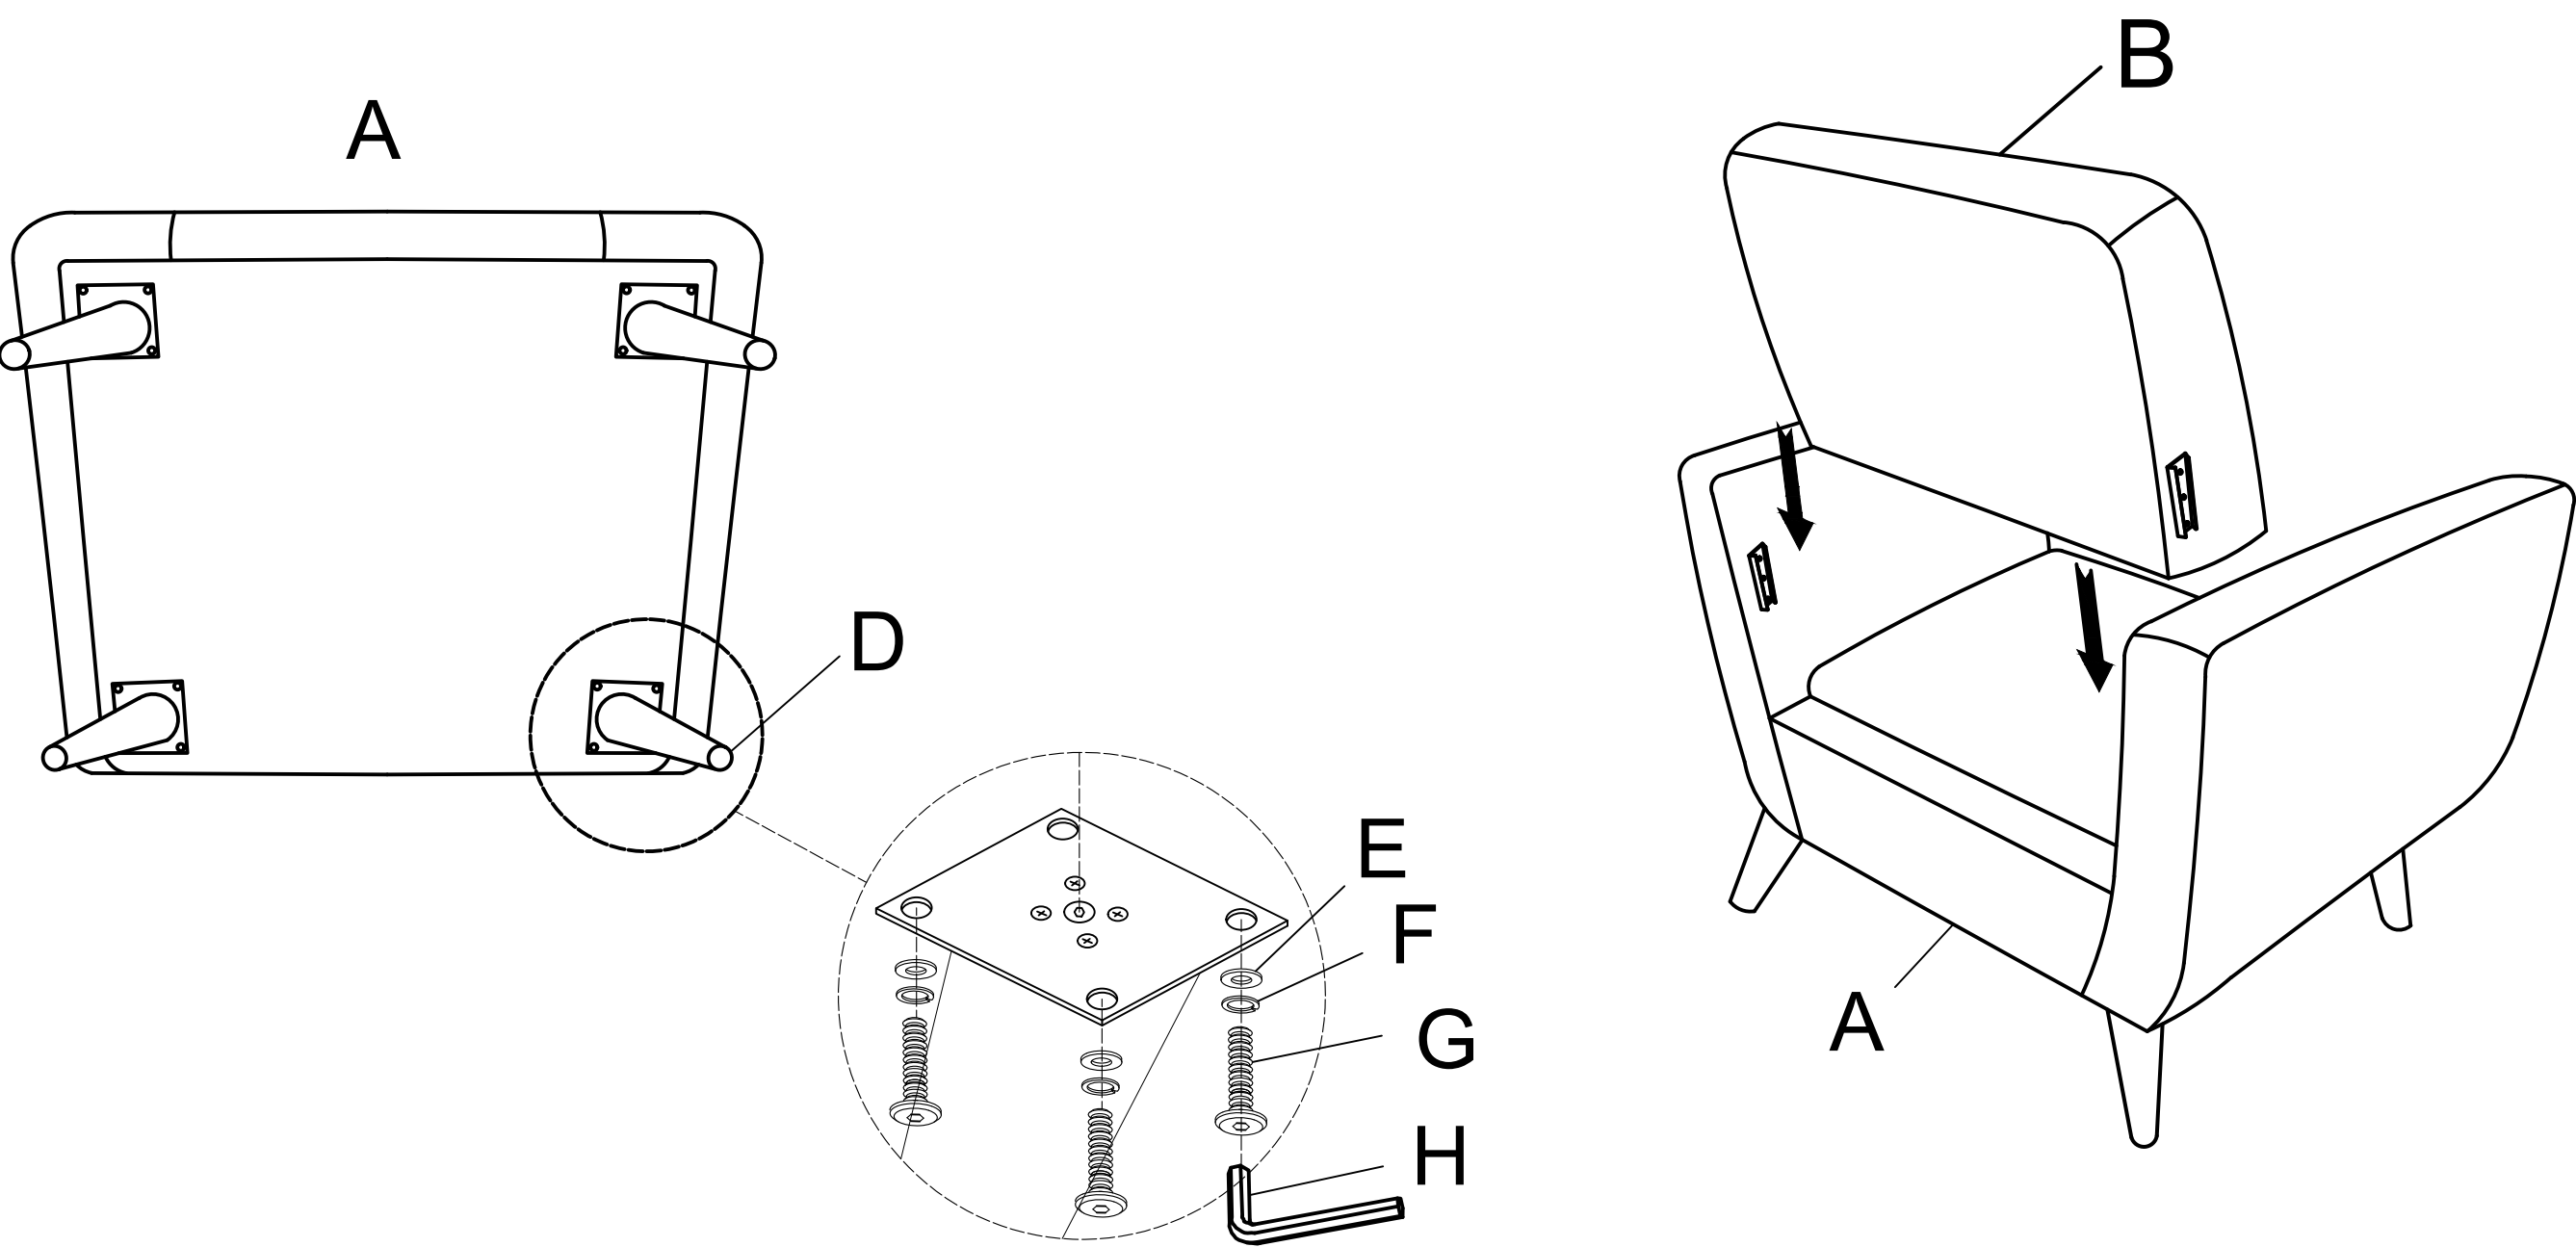

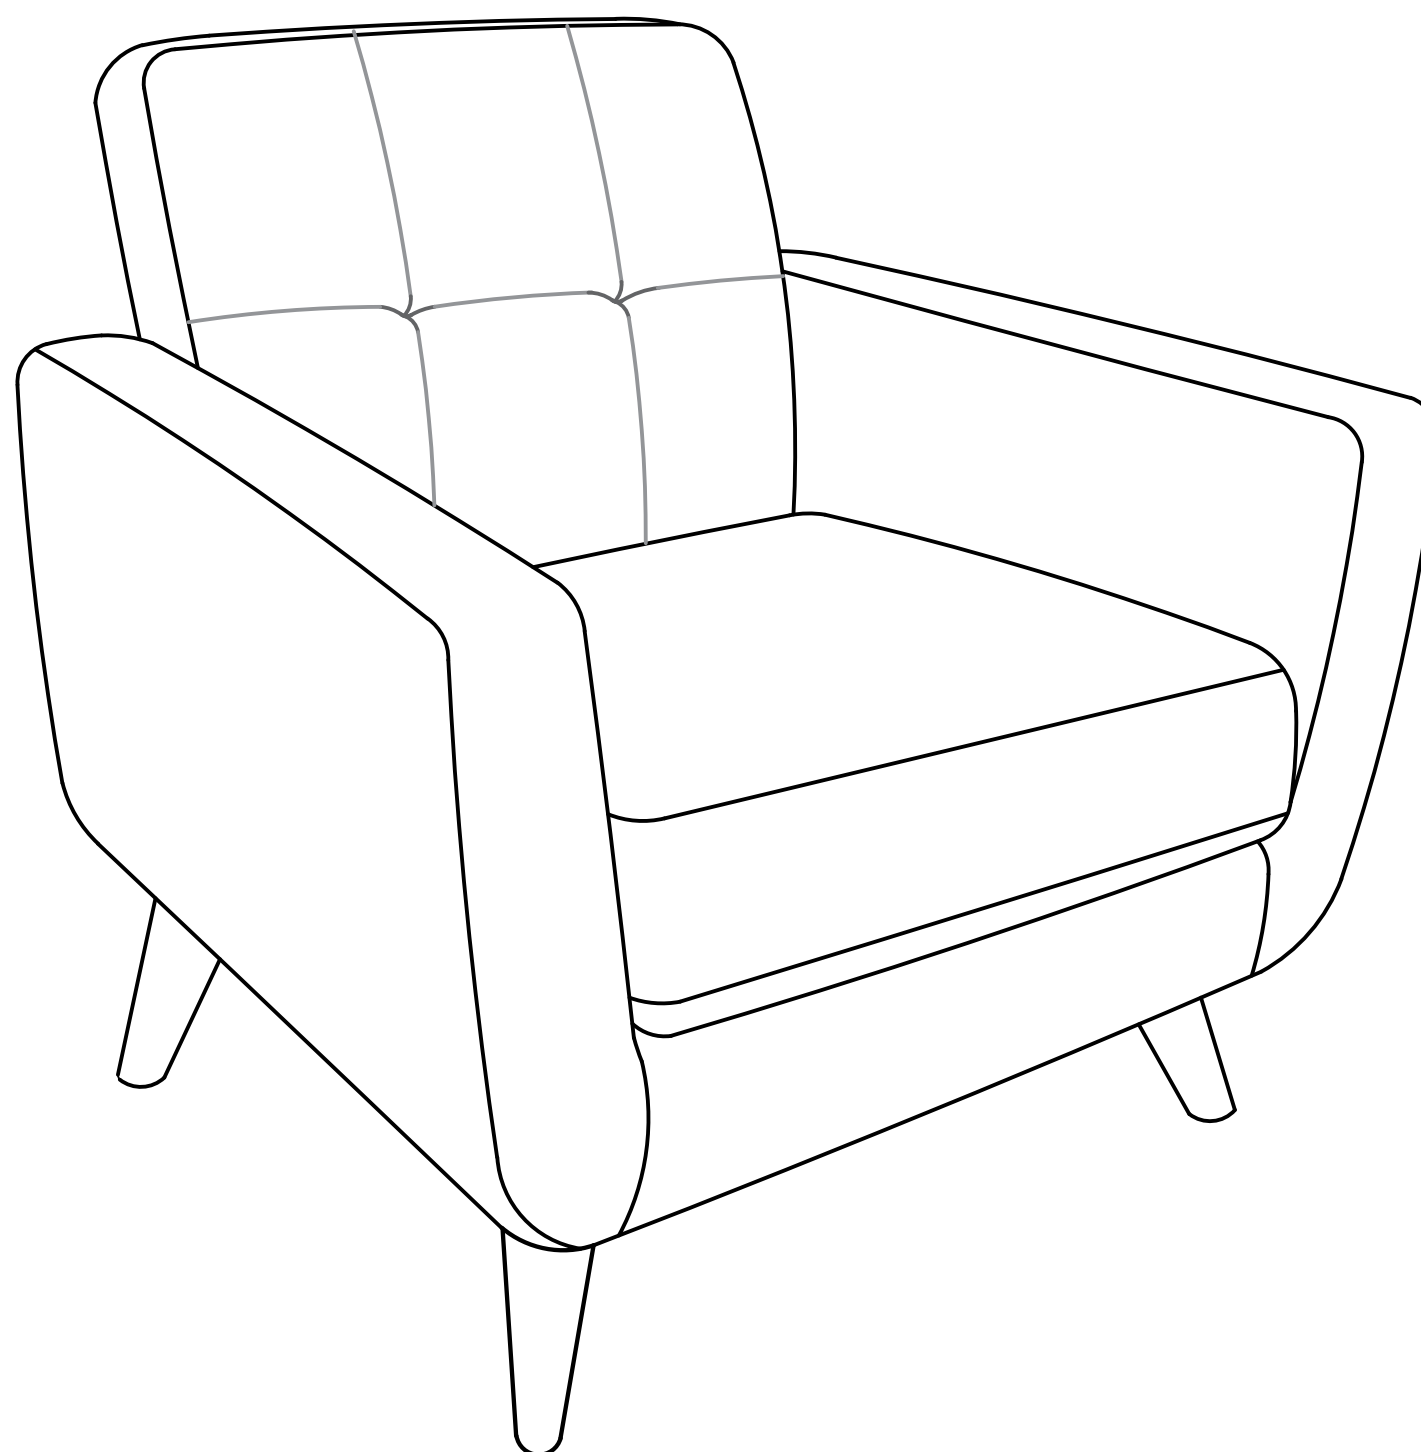

Care Instructions for Textured Fabric Furniture:

In order to maintain the original appearance of your Textured Furniture, please follow the simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage Textured.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.