

ASSEMBLING INSTRUCTIONS


ITEM NO: 1053DG-1/ 1053BU-1/ 1051GY-1

Accent Chair

Legs and hardware are stored in the bottom of the seat, please take them out for assembly. Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to spliting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY	PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC	1		Bolt Ø5/16"×1"	12 PCS
В		Front Wooden Leg 3-1/4"x3-1/4"x8-3/4"	2 PCS	2	Ø	Spring Washer Ø5/16"	12 PCS
С		Rear Wooden Leg 3-1/4"x3-1/4"x8-1/3"	2 PCS	3	0	Flat Washer Ø5/16"×3/4"	12 PCS
		-		4		Allen Key M4	1 PC



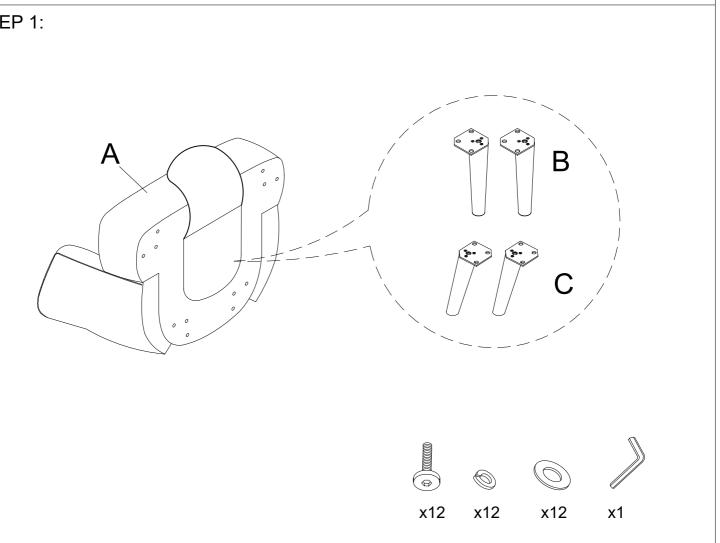



ASSEMBLING INSTRUCTIONS

ITEM NO: 1053DG-1/ 1053BU-1/ 1051GY-1


Accent Chair


3

2

1

4

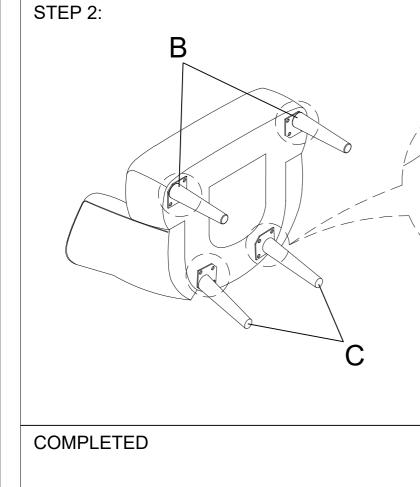

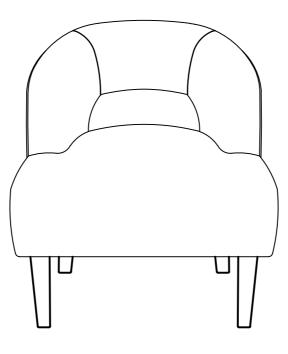

Care Instruction for Velvet Furniture:

- In order to maintain the original appearance of your velvet furniture, please follow below simple care proceures: • Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
 - Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
 Sunlight and or exposure to heating and airconditioning outlets will fade/damage velvet.
 - Vacuum or wipe with a soft cloth to remove dust.
 - Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary
- For item use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.