

# ASSEMBLY INSTRUCTIONS

## ITEM NO: 5447-24S

### SWIVEL STOOL

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Read instructions carefully. Remove all wrapping material, staples and packing straps from the carton. See Hardware and Furniture Part List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture parts on clean and flat soft surface, such as carpet or rug to prevent from being scratched.

**CAUTION : (1) DO NOT FULLY-TIGHTEN THE NUTS OR BOLTS INITIALLY UNTIL ALL THE NUTS AND BOLTS ARE IN PLACE. (TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS. )**

**(2) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.**

**NOTE: MUST TIGHTEN SCREWS PERIODICALLY, WITH USED SCREWS WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.**

#### PARTS LIST :

CODE	COMPONENT		QTY
A	BACK FRAME WITH CUSHION SEAT		1 unit
B	LEG		4 pcs
C	O-RING STRETCHER		1 pc

#### HARDWARE LIST :

CODE	COMPONENT		QTY
a	JCBC BOLT M6 x 40mmL		4 pcs
b	JCBC BOLT M6 X 50mmL		8 pcs
c	SPRING WASHER Ø13mm		12 pcs
d	FLAT WASHER Ø18mm		12 pcs
e	ALLEN KEY 4mm		1 pc

