

**Assembly Instruction** 

ITEM NO.:1220F4S ACCENT CHAIR



Legs & hardware are stored at the bottom of seat inside the dust cover as shown in drawing, please take out the legs and hardware for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

### **Component list**

No	Drawing	Description	Qty
А		CHAIR	1 PC
В		WOODEN FRONT LEG L&R	2 PC
С		WOODEN REAR LEG L&R	2 PC
D		BOLT(M8×80mm) (FRONT LEG)	4 PC
E	$\odot$	WASHER	8 PC
F		ALLEN KEY	1 PC
G		BOLT(M8×65mm) (REAR LEG)	4 PC

## Please follow the drawings below to assemble the item.

Step 1 Take out the Legs & hardware from the the bottom of seat inside the dust cover as shown in drawing.

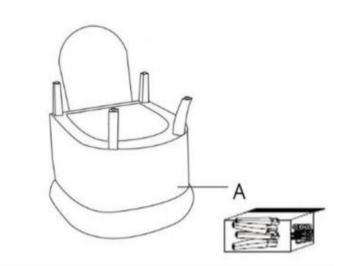



#### Step 2 Front Leg Assembly:

Align and insert front legs to the front seat frame pre-drilled holes, make sure both pre-drilled holes are in line, insert bolts D and washers then tighten with Allen Key.

#### **Rear Leg Assembly:**

Align and insert rear legs to the rear seat frame pre-drilled holes, rear legs curves must facing outward, make sure both pre-drilled holes are in line, insert bolts G and washers then tighten with Allen Key.

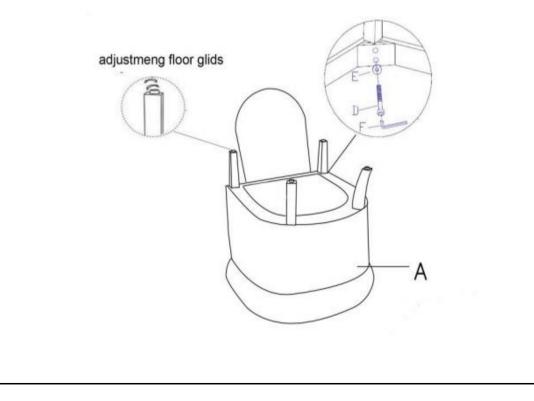

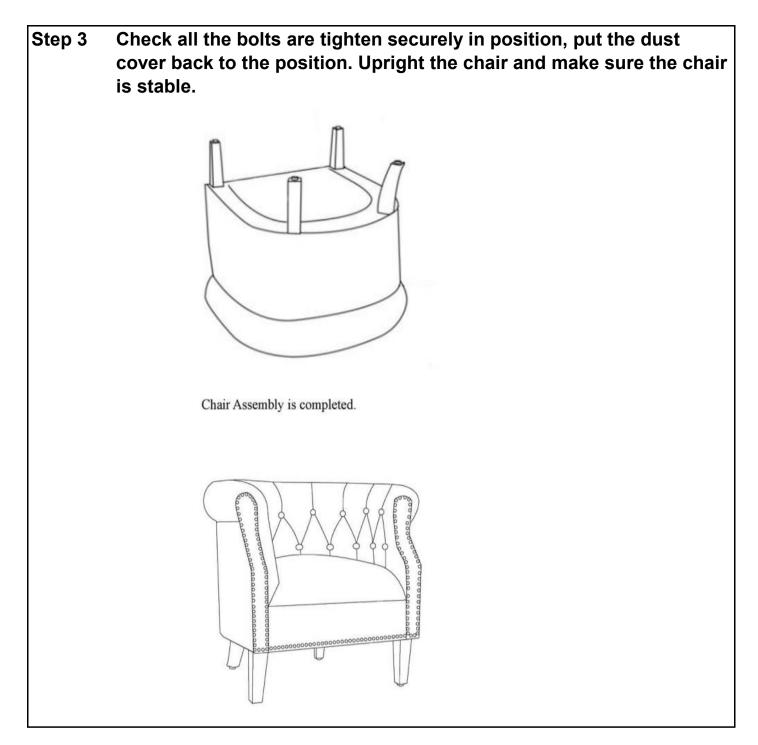

# **Care Instruction for Fabric Furniture:**

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures:

• Avoid exposing forniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric.

- Vacuum or wipe with a soft brush to remove dust.
- Clean fabric furniture with professional cleanser.



• For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.