



# ASSEMBLY INSTRUCTION

## 1602BKF/BK-1: METAL FULL/QUEEN BED WITH BLACK PVC HEADBOARD

### HOMELEGANCE


#### PART LIST:




A:LSF HB LEG FOR ALL SIZE BED  
1PC



B:RSF HB LEG FOR ALL SIZE BED  
1PC

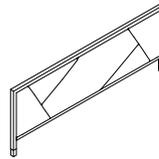


C:HEADBOARD  
1PC

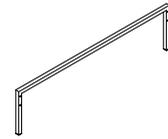


D:FOOTBOARD  
1PC




E:SLAT CONNECTOR FOR ALL SIZE BED  
28PCS

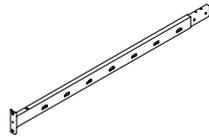

F:SIDE RAIL  
2PCS

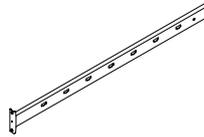

G:SIDE RAIL  
2PCS

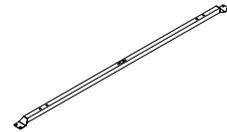


H:CENTER CROSS BAR  
1PC




I:CENTER SLAT SUPPORT LEG  
3PCS



J:CENTER RAIL SUPPORT LEG  
2PCS

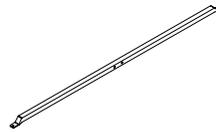


K:SIDE CROSS BAR  
2PCS

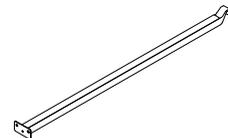

L:CENTER RAIL SUPPORT BAR  
2PCS



M:BRACKET  
1PC



N:SLAT  
14PCS

#### HARDWARE SET:




1: Bolt 1/4\*10mm  
X 8pcs



2: Bolt 1/4\*17.5mm  
X 8pcs



3: Bolt 1/4\*22mm  
X 12pcs



4: Bolt 5/16\*19mm  
X 8pcs



5: Bolt 1/4\*40mm  
X 6pcs



6: Nut 1/4  
X 6psc



7: Washer 1/4  
X 4psc





8: Ratchet Tool  
X 1pc



9: Wrench  
X 1PC


## How to Use the Ratchet Tool (8)

1. Before assembling the furniture, please adjust the lock as needed.

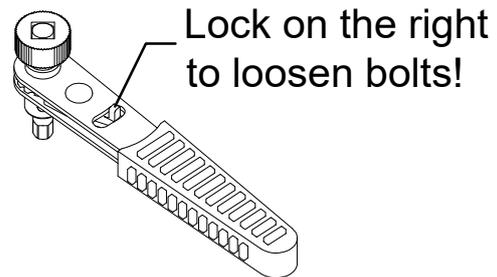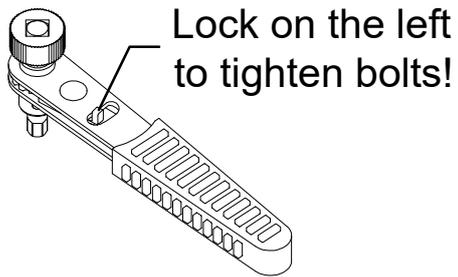


2. Tighten or loosen bolts.

- **Tighten bolts:** Locate the turncap and rotate it clockwise to screw the bolt quickly until it cannot be rotated any more. Then start rotating the handle clockwise to finalize tightening the bolt.

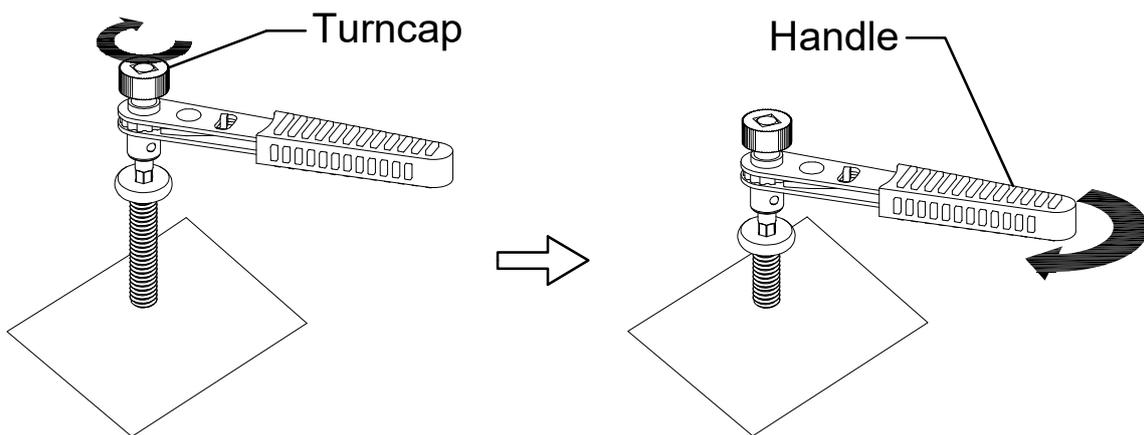


- **Loosen bolts:** Rotate the handle counterclockwise to loosen the bolt. Then continue rotating the turncap in the same direction to remove the bolt completely.

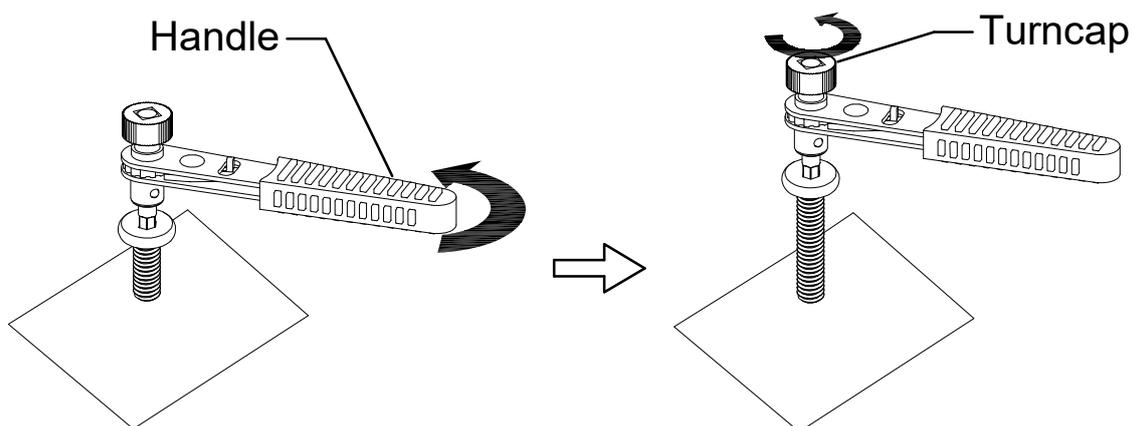


Note: Please do not tighten all bolts until the bed is assembled completely.

STEP 1

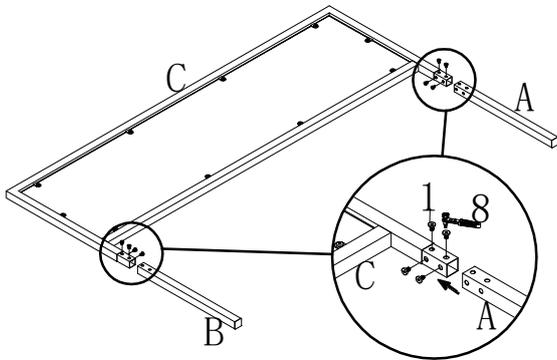


Hardware 1: 8 pcs

STEP 2

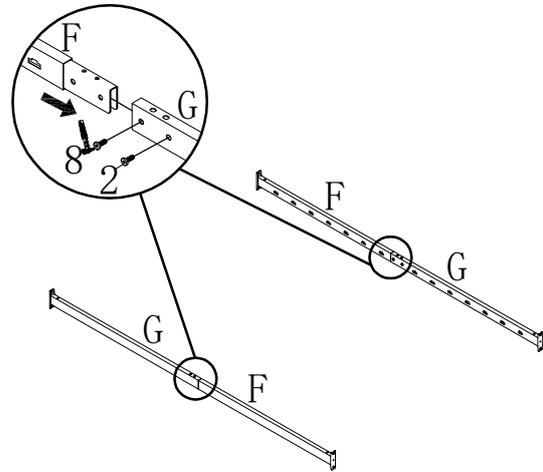


Hardware 2: 4 pcs

STEP 3

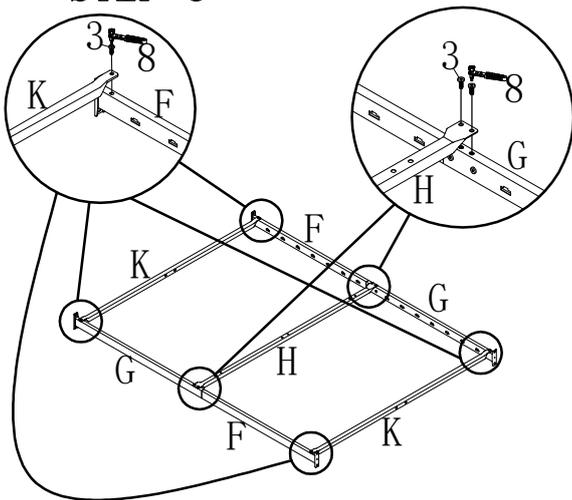


Hardware 3: 8 pcs

STEP 4

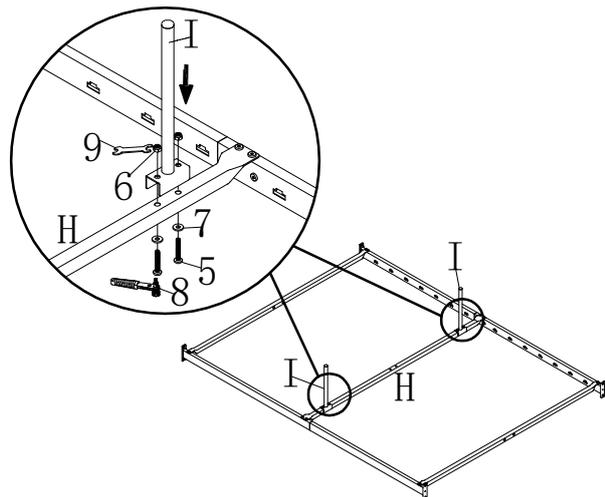


Hardware 5: 4 pcs  
Hardware 6: 4 pcs  
Hardware 7: 4 pcs

STEP 5

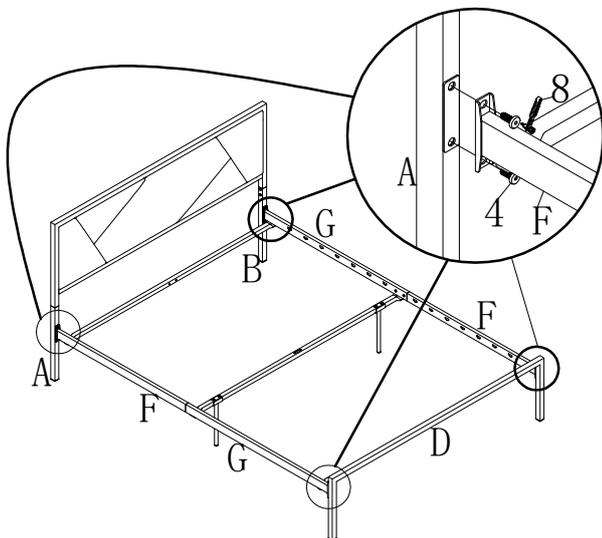

Hardware 4: 8 pcs


STEP 6

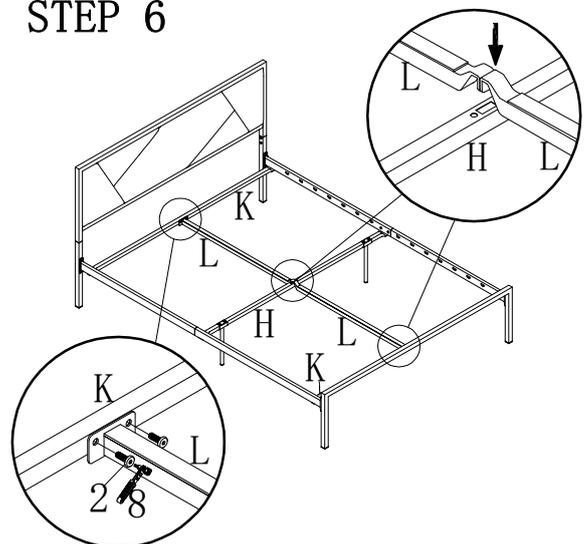


Hardware 2: 4 pcs

Note: Please do not tighten all bolts until the bed is assembled completely.


### STEP 7

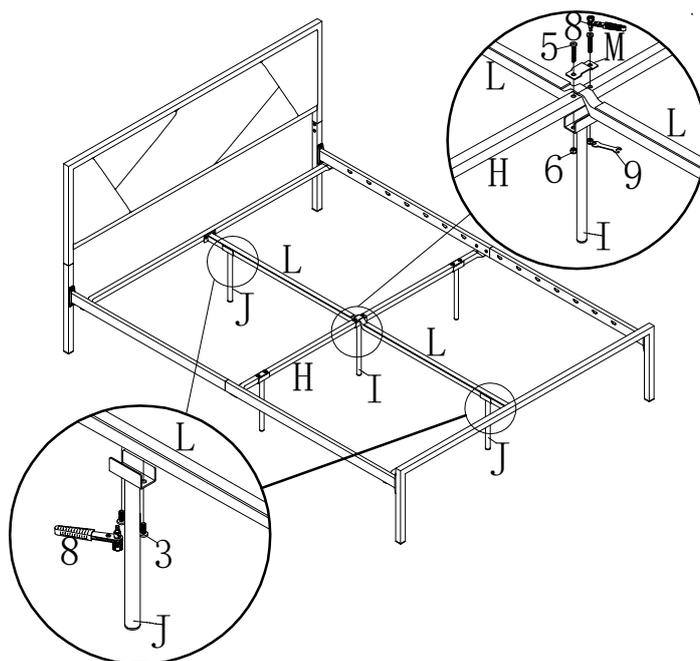

### STEP 8

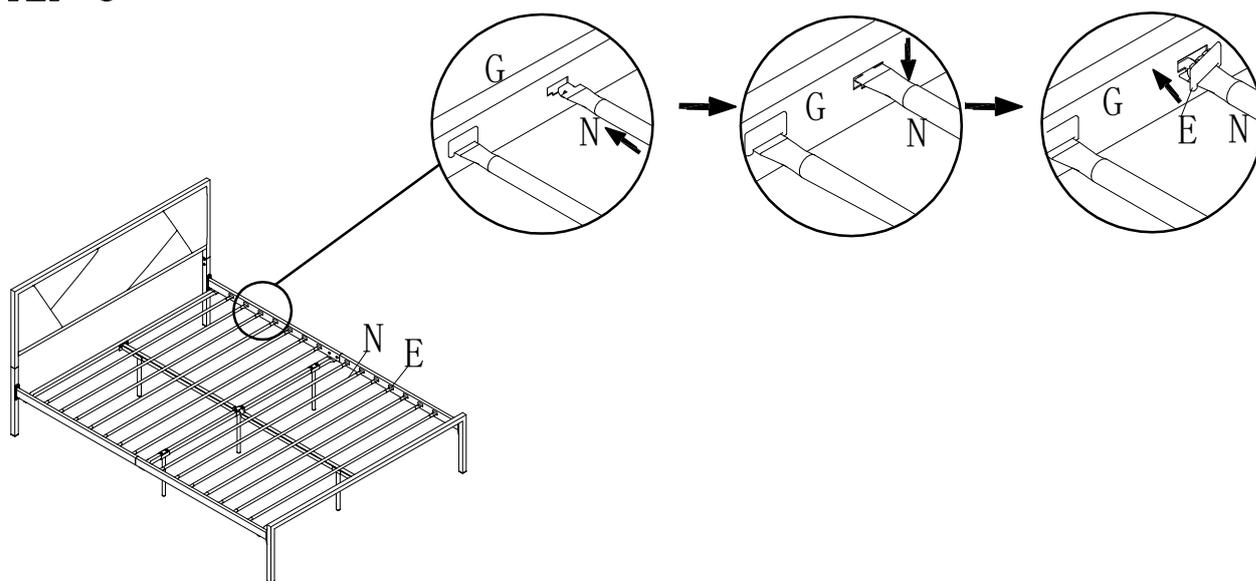

### COMPLETED

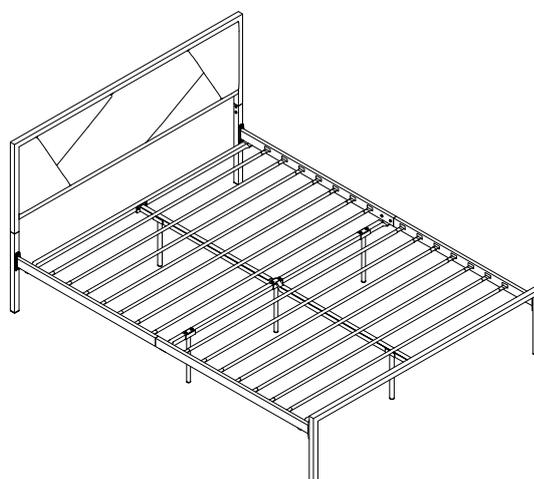

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.