




## ASSEMBLY INSTRUCTION

ITEM NO: 9127BRW-3 SOFA.


| NO. | PARTS LIST | QTY | DESCRIPTION | NO. | PARTS LIST | QTY | DESCRIPTION         |
|-----|------------|-----|-------------|-----|------------|-----|---------------------|
| A   |            | 1   | Seat Frame  | F   |            | 1   | Back Rail           |
| B   |            | 1   | LSF Armrest | G   |            | 4   | Washer              |
| C   |            | 1   | RSF Armrest | H   |            | 4   | Allen Bolt ØM6*20   |
| D   |            | 1   | Back Rest   | I   |            | 1   | Allen Key Ø1/4" *M4 |
| E   |            | 4   | Plastic Leg |     |            |     |                     |

### STEP 1


Take out LSF/RSF Armrest (B,C) from the bottom.

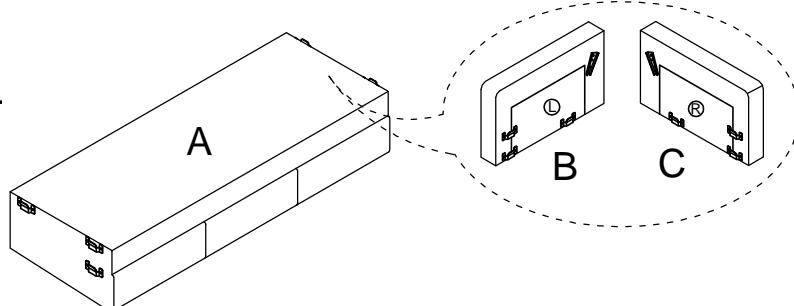


### STEP 2

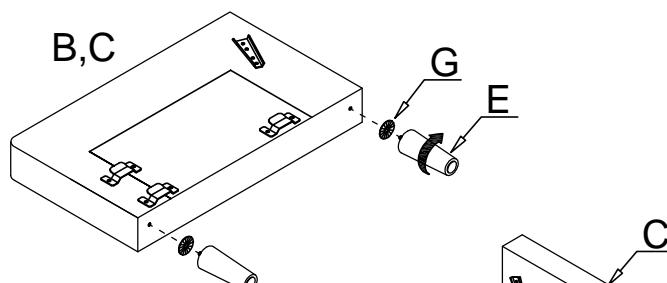


### STEP 3

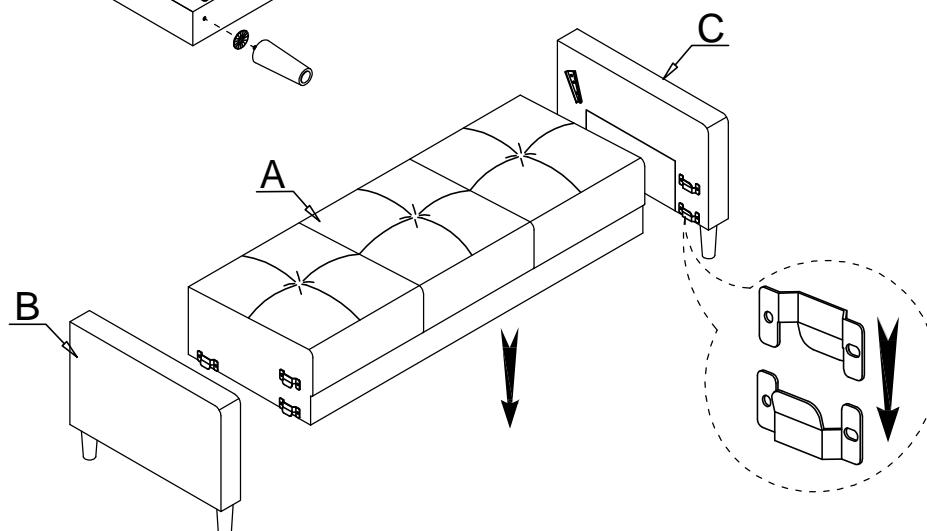


### STEP 4:

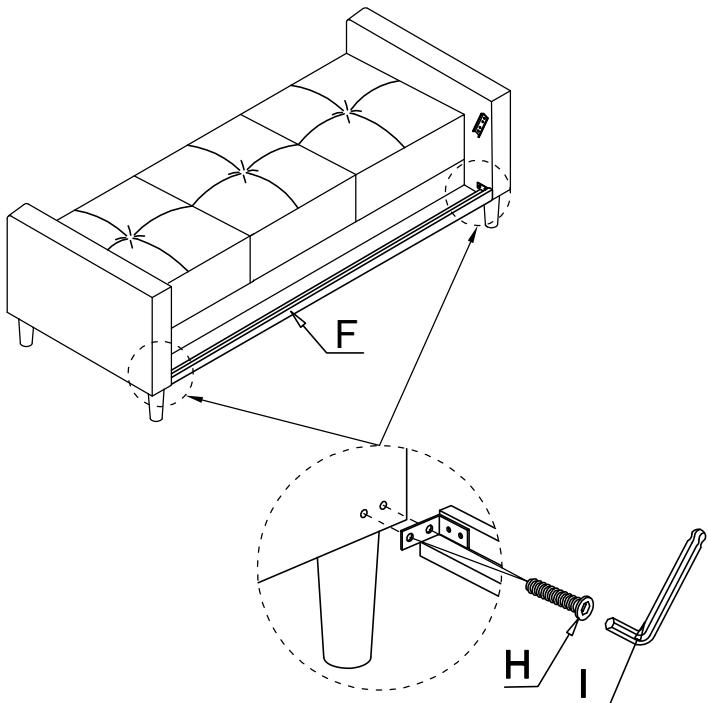


### STEP 5:

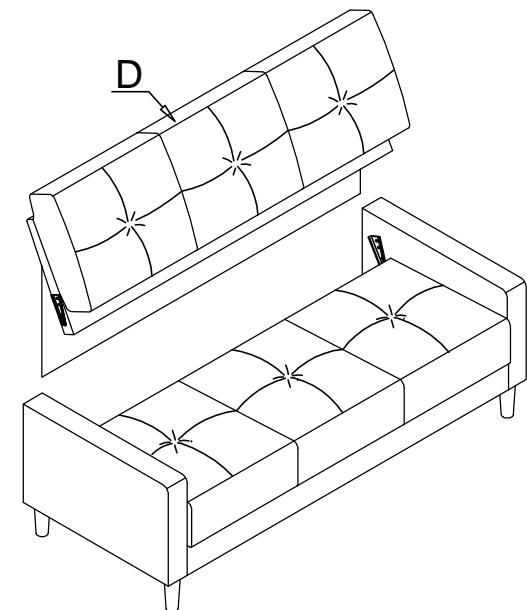

### STEP 6:

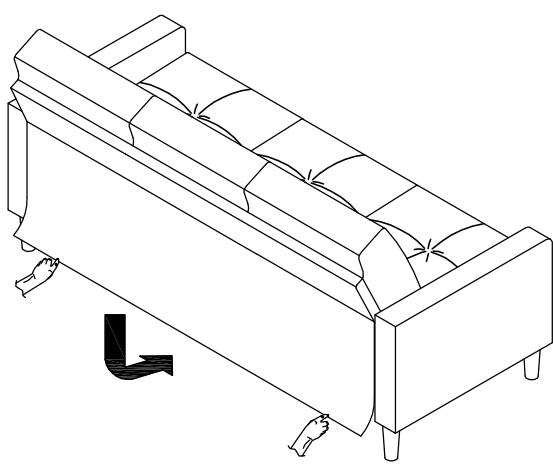

### STEP 7 (Completed):

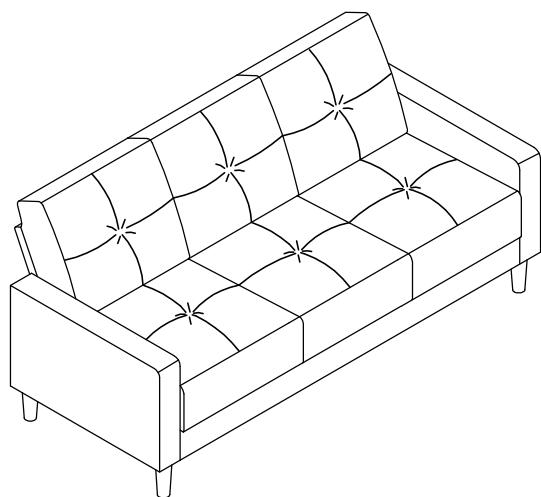

#### CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures.

• Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.

• Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.