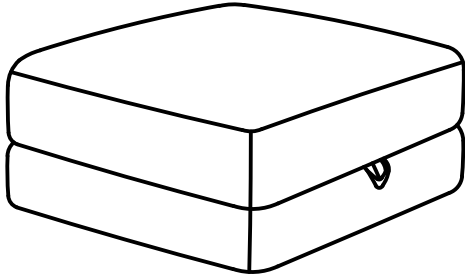
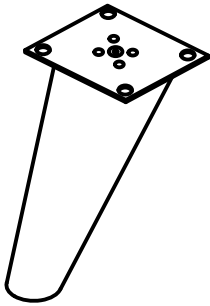
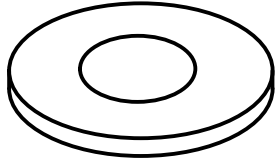
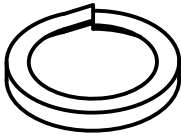
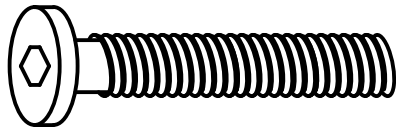


# Assembly Instructions


ITEM NO.: 9149GRN/BEG-4  
STORAGE OTTOMAN

Note: Do not use power tools for assembly. Power tools increase the risk of over-tightening which leads to splitting or cracking the wood.


## Component List



| No       | Drawing                                                                             | Qty | Description                            |
|----------|-------------------------------------------------------------------------------------|-----|----------------------------------------|
| <b>A</b> |  | 1   | <b>SEAT</b>                            |
| <b>B</b> |  | 4   | <b>WOODEN LEG<br/>(70*180H)</b>        |
| <b>C</b> |  | 16  | <b>FLAT WASHER<br/>(1/4"*16*1.5MM)</b> |
| <b>D</b> |  | 16  | <b>SPRING WASHER<br/>(1/4")</b>        |
| <b>E</b> |  | 16  | <b>BOLT<br/>(1/4"*15MM)</b>            |
| <b>F</b> |  | 1   | <b>ALLEN KEY<br/>(M4*50*100MM)</b>     |

Step #1

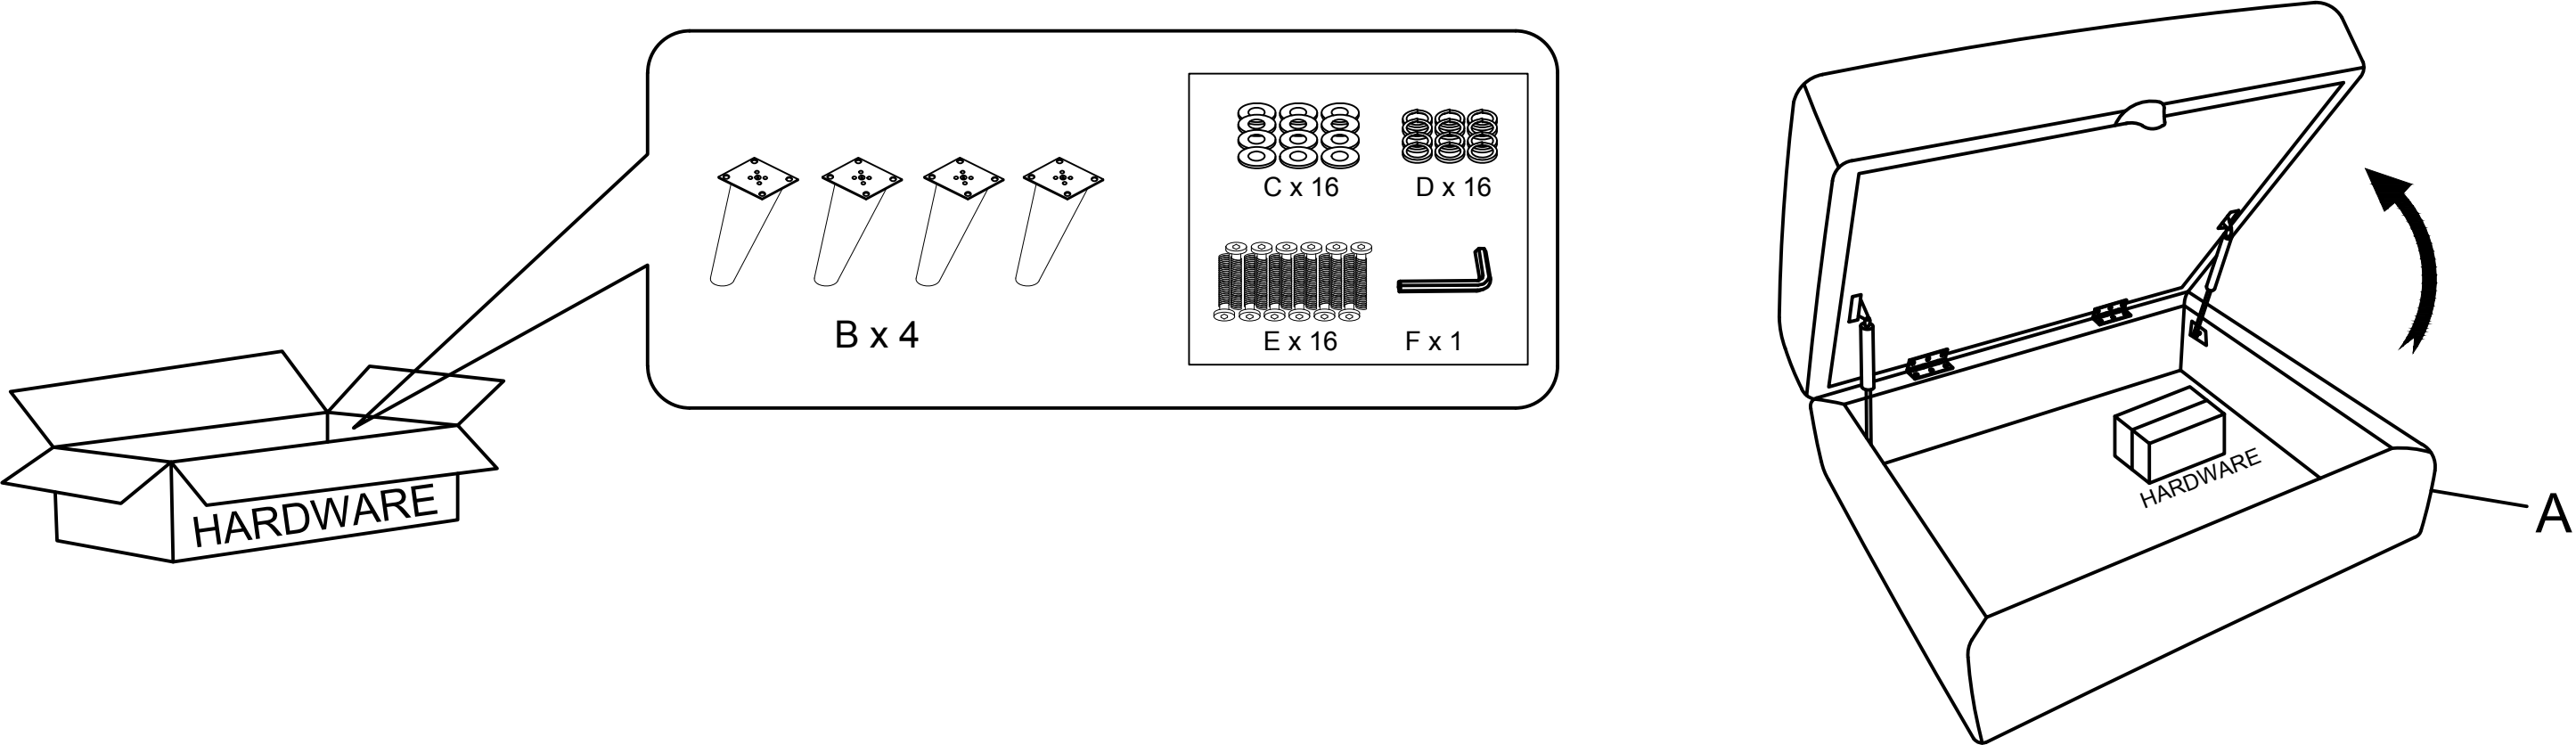

Step #2

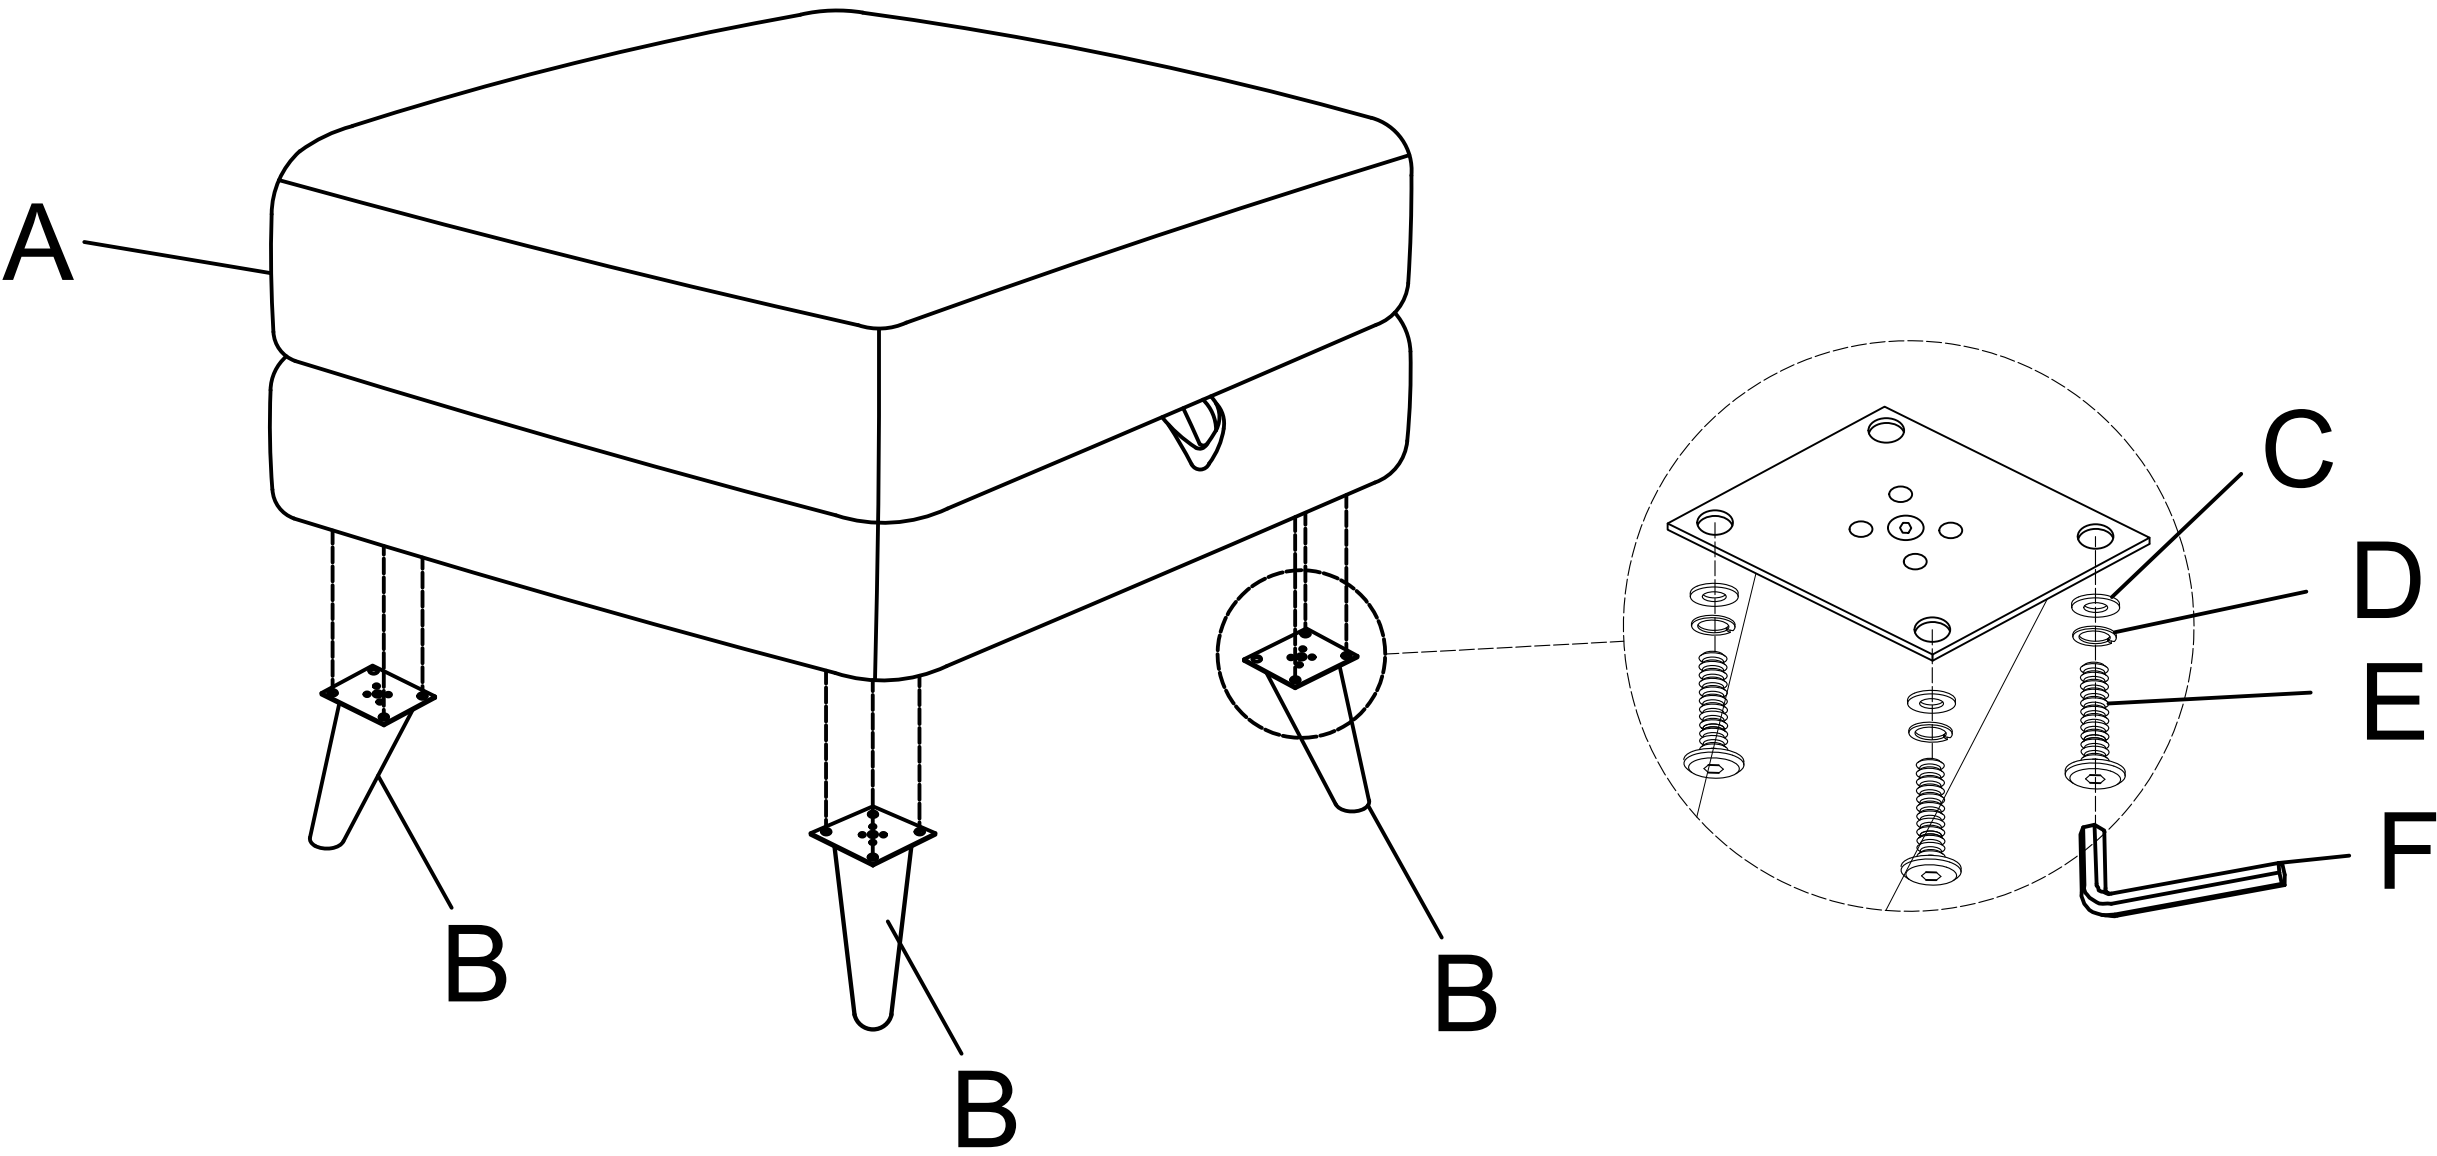

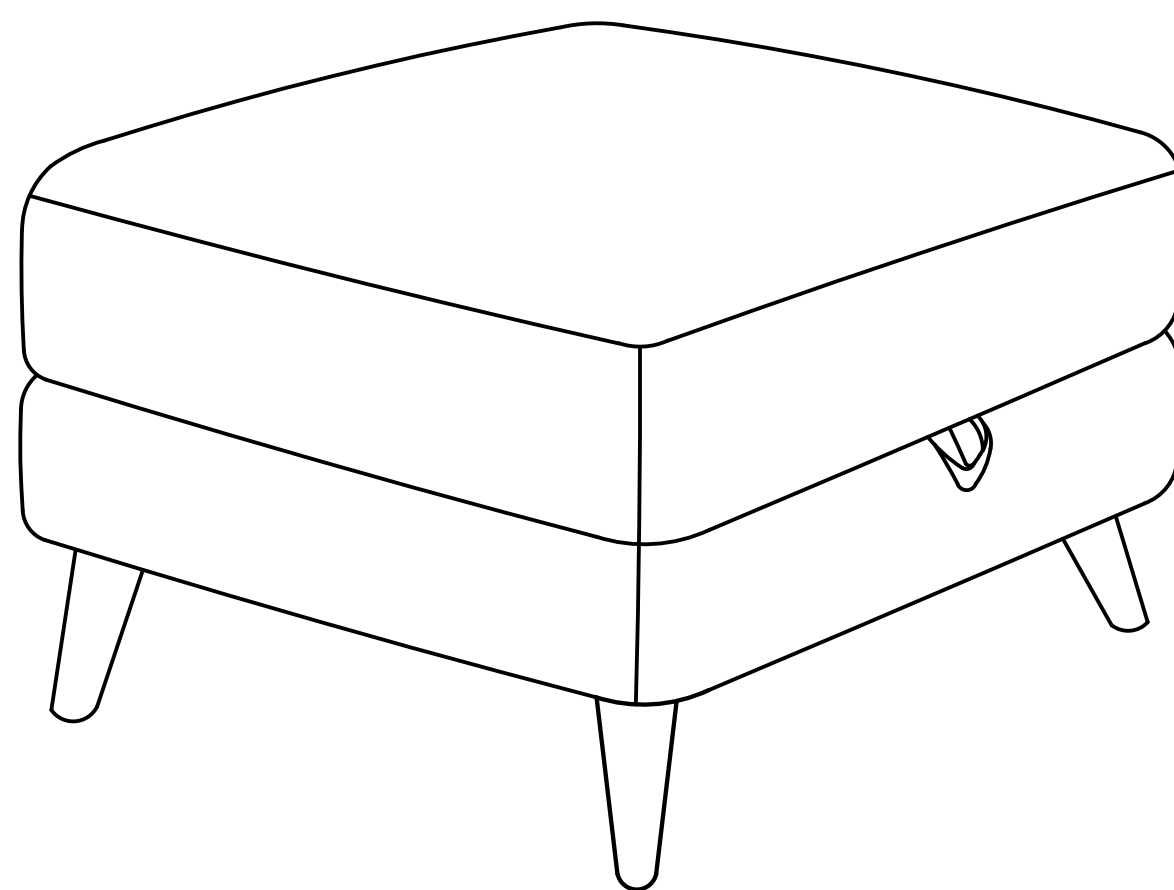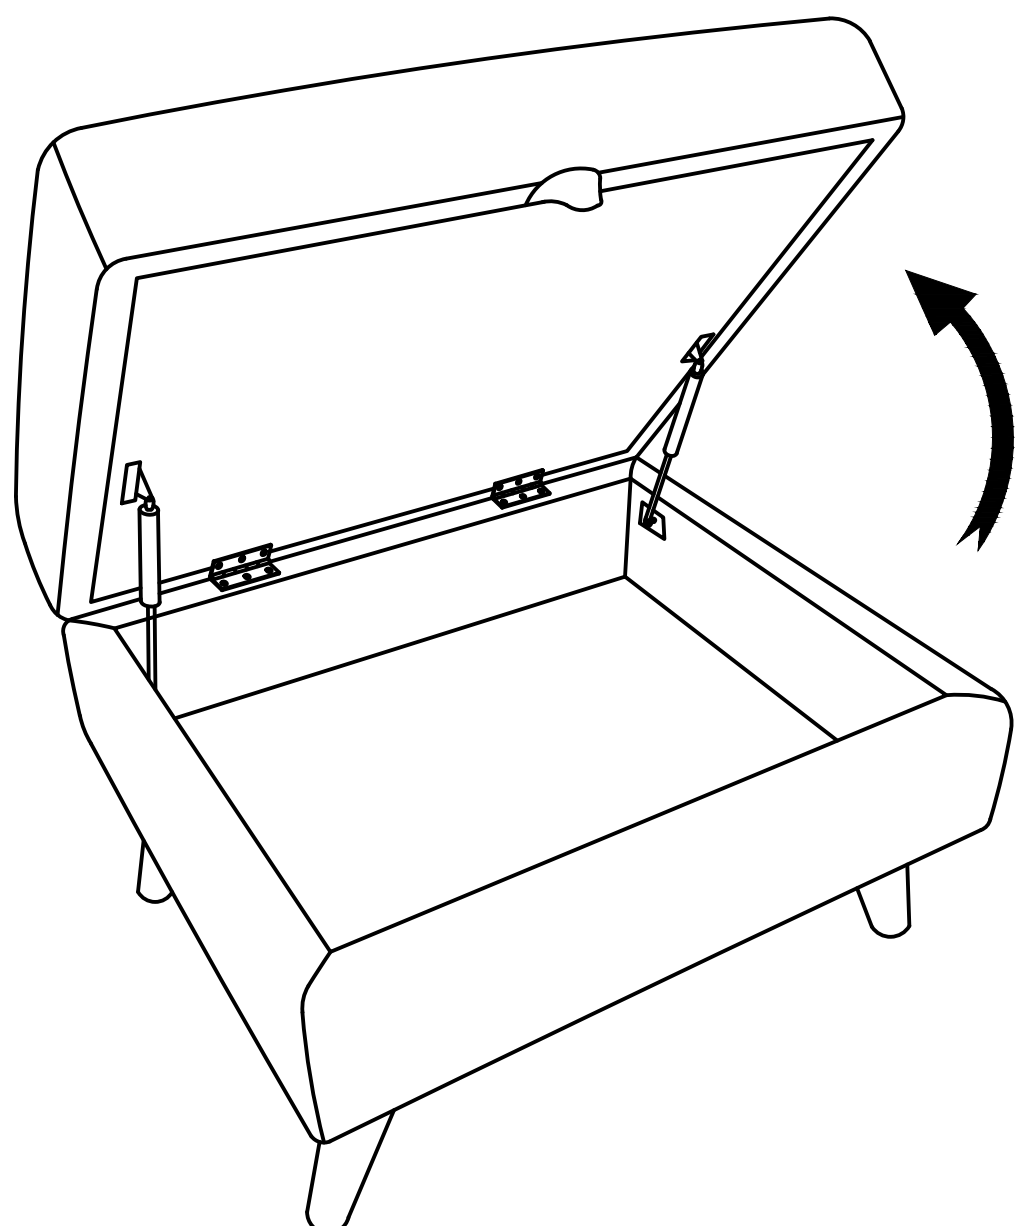

## Care Instructions for Textured Fabric Furniture:

In order to maintain the original appearance of your Textured Furniture, please follow the simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage Textured.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.