



ASSEMBLY INSTRUCTION

HOME ELEGANCE

4968BK-NT DAYBED WITH TRUNDLE


PART LIST:




A:Front Post
x 2pcs



B:Rear Post
x 2pcs

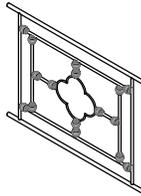


C:Arm Panel
x 2pcs

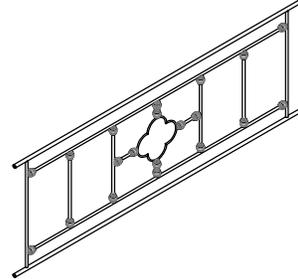


D:Back Frame
x 1pc




E:Daybed Rail
x 2pcs

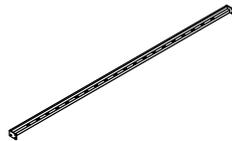

F:Trundle Long Rail
x 2pcs

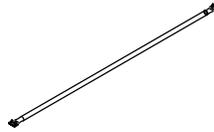

G:Slat
x 42pcs
(Daybed:22pcs, Trundle:20pcs)



H:Trundle Short Rail
x 2pcs



I:Wheel
x 2pcs



J:Lock Wheel
x 2pcs



K:Finial
x 4pcs

HARDWARE LIST:




L:Bolt 1/4*55mm
x 12pcs



M:Bolt 1/4*16mm
x 16pcs




N:Allen Key
x 1pc




O:Wrench
x 1pc

Note: Please do not tighten all bolts until the bed is assembled completely.


STEP 1

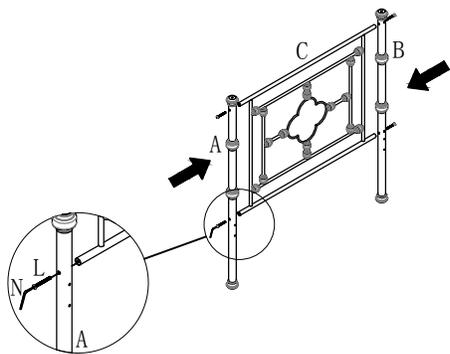


STEP 2

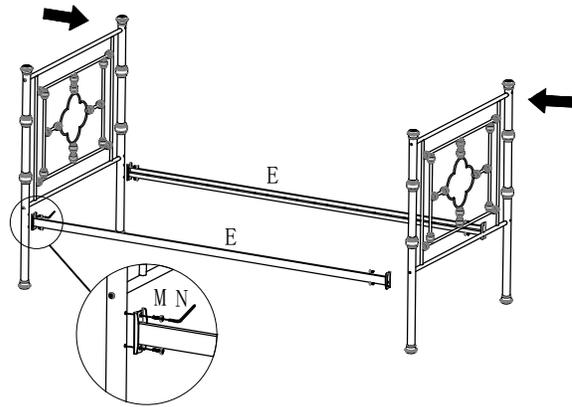


STEP 3

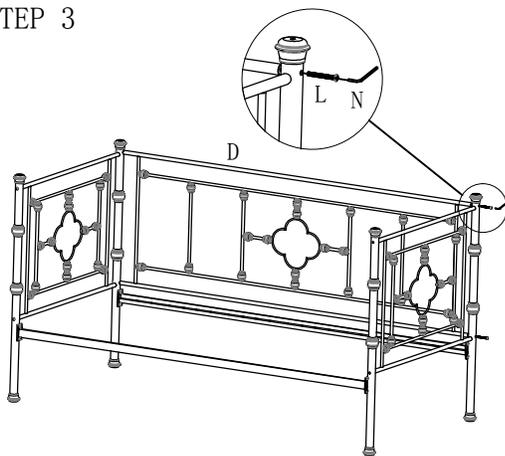


STEP 4

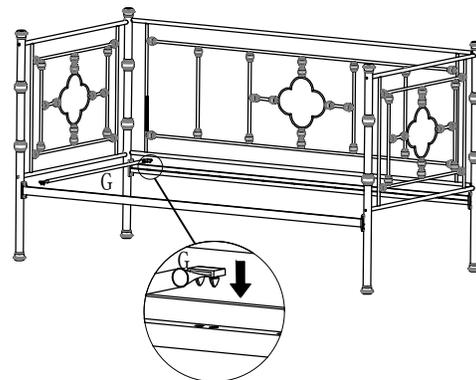

STEP 5

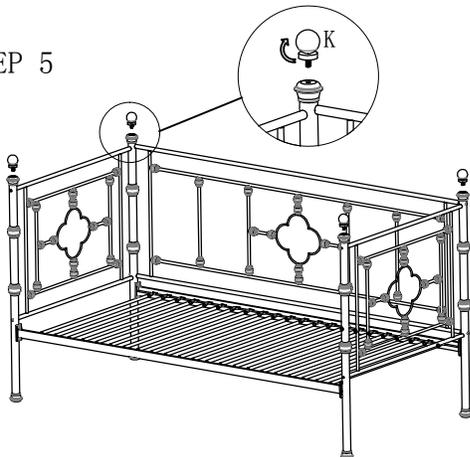


DAYBED COMPLETED

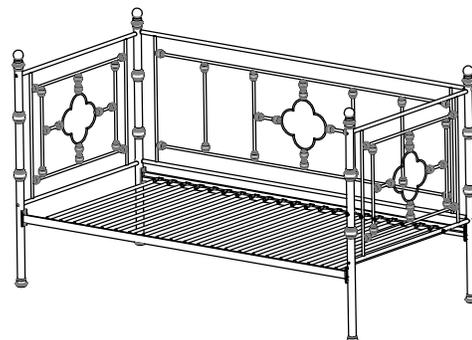


Note: Please do not tighten all bolts until the bed is assembled completely.


STEP 5

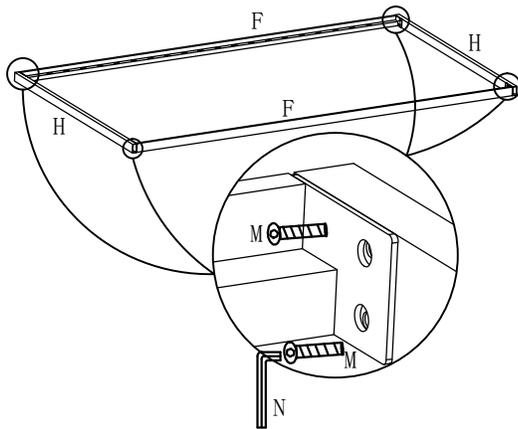


STEP 6

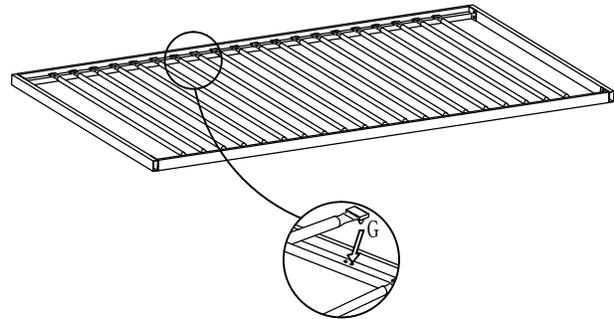


STEP 7

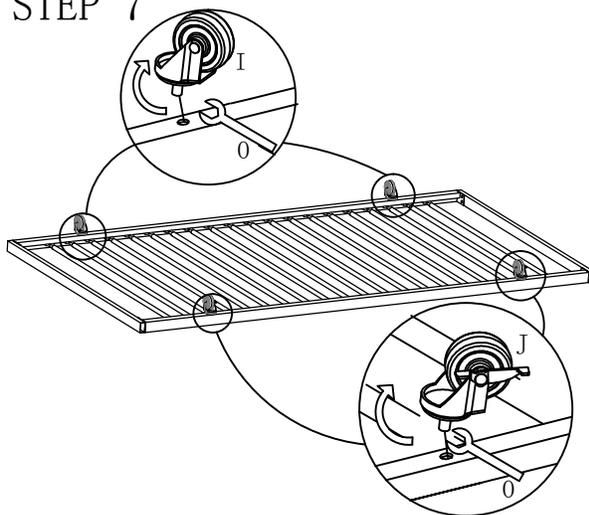


TRUNDLE COMPLETED



STEP 8

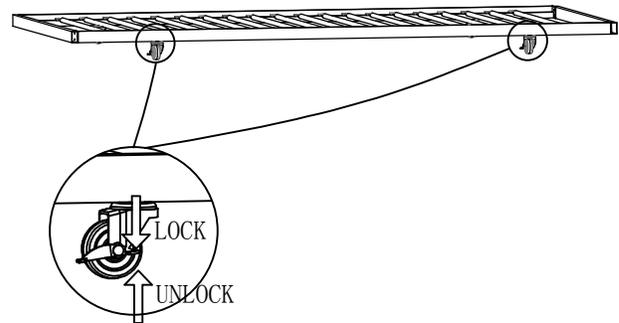

COMPLETED

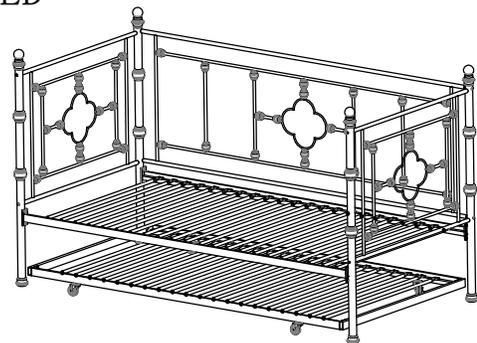

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/ scratches and discoloration.