

## ASSEMBLY INSTRUCTION

ITEM NO: 9266BRW/9266BEG-4 OTTOMAN

## LEGS AND HARDWARE ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

NO.	PARTS LIST	QTY	DESCRIPTION
A		1	OTTOMAN


NO.	HARDWARE LIST	QTY	DESCRIPTION
в	95*95*95mmH	4	WOODEN LEG
с	(∲ <u>)))))))))</u> M8*75mm	4	BOLT
D	© Φ8.5*16*1.5mm	4	FLAT WASHER




## ASSEMBLY INSTRUCTION

ITEM NO: 9266BRW/9266BEG-4 OTTOMAN

STEP # 1

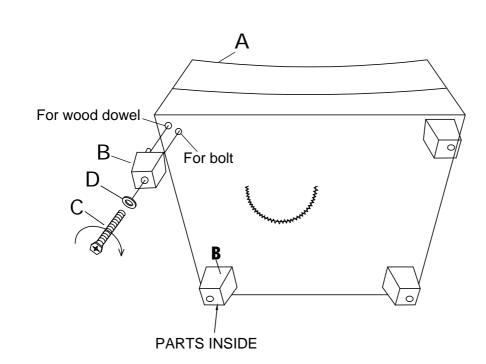

**STEP # 2** 

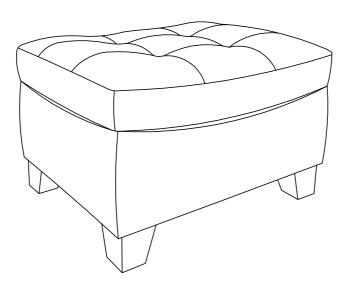

## CARE INSTRUCTION FOR TOP LEATHER WITH PU FURNITURE

In order to maintain the original appearance of your funiture, please follow below care procedures. <sup>°</sup>Avoid exposing furniture directly to sunlight or heating and air conditionging outlets. sunlight and/ or exposure to heating and air conditioning outlets will fade/damage top leather with PU. Do not place your upholstered furniture too close to windows, radiators, vents and be sure to use window treatments to block the sun's rays. <sup>°</sup>Wipe with a soft brush to remove dust.